

# Assembly instructions, maintenance and safety information

Batch no. ....

Arben Wheel

CE UK  
CA



Triclimb®



## CARE INSTRUCTIONS

Caring for your Triclimb product is not only essential for improving safety, but will also add years to its life for your children to play on and enjoy it as they grow.

**WARNING:** if the checks and maintenance of the Triclimb unit are not carried out the product could become a hazard.

\*All bolts and fixings should be checked regularly and tightened if necessary.

\*It is important to check your Triclimb product for wear and damage regularly. If you are unsure as to the integrity of any component, replace it immediately.

\*We recommend that you regularly check your Triclimb product for splits, broken or cracked wood and for loose, missing or sharp-edged hardware. Replace, tighten and/or sand smooth as required prior to playing.

\*The wooden components are manufactured from FSC birch plywood and solid timber poles; they are protected with a durable child/toy-safe finish.

\*To clean, wipe with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish. Do not use abrasive cleansers.

\* Do not modify the unit. Triclimb is not responsible for any injury arising as a result of modifications made by customers to our products without our supervision, testing, or evaluation.

IPO - Registered design.

Model – AW

Designed and Manufactured by Triclimb Ltd.  
Triclimb Ltd. Ty Gelert, Porthmadog, LL499NX  
Triclimb NI, PO Box 620, CRAIGAVON BT64 9EL

[www.triclimb.co.uk](http://www.triclimb.co.uk) [hello@triclimb.co.uk](mailto:hello@triclimb.co.uk)

**IMPORTANT! These instructions must be followed for use.  
Please retain for future reference. 2021 V1.**


UKCA, EU, ASTM, CPSC, ISO, SOR tested and approved

# Triclimb

Suitable for ages 0+

TOP DECK AND TRICLIMB NOT INCLUDED – sold separately.

PLEASE NOTE – For use with the Triclimb & Triclimb Mini when combined with the Arben Top Deck.

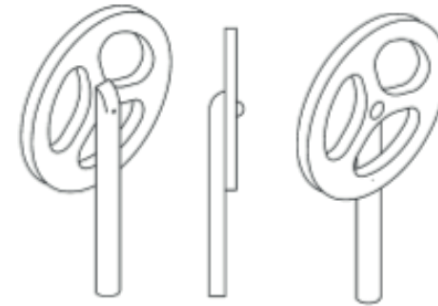

## ENCOURAGE – ENHANCE – ENGAGE

Congratulations on the purchase of your Triclimb accessory. We hope that your children (and all the family) will have hours of fun playing with it! We would love to hear about your children's adventures and any feedback you may have.

We pride ourselves on the versatility, durability and safety of the Triclimb range. The range has been created to encourage children to be active, imaginative and creative in their play, the Triclimb seeks to enhance balance, develop motor skills and engage both mind and muscle.

Benefits of Play: The Triclimb provides a surface designed for climbing which is intended for young children. Younger children are still developing a sense of judgement and learning the strength of their own bodies. They will be testing how far and how high they can jump and move. Their balance is still under development, and they are learning how to solve physical problems using their bodies. The Triclimb provides a chance to develop all sorts of skills appropriate to their age; climbing gives them the opportunity to test, retest and perfect their strength, coordination, self-confidence, concentration and independence.



## WARNINGS

- \* It is extremely important that you read and retain the information in this WARNINGS section to reduce the risk of injury.
- \* Warning: contains small parts – choking hazard.
- \* Children must be supervised at all times while using the Triclimb product range.
- \* No running, pushing or fighting.
- \* Only use the Triclimb for its intended purpose. For indoor use only, in a domestic setting.
- \* Tip over hazard - Place play-frame on a level surface.
- \* Do not allow children to play on the Triclimb frame until the unit is fully opened.
- \* Keep floors free of trip hazards and observe an obstacle free safety zone of at least 2m in all directions around the unit.
- \* To minimize risk of injury from falling, do not install over a hard surface; a protective surface should be used. Maximum vertical fall height - 600mm
- \* Never allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-frame or to attach these items to the play-frame.
- \* Never allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using Triclimb products.
- \* Do not allow children to wear open toe or heel footwear like sandals or flip-flops whilst climbing.
- \* Do not permit rough play or use of equipment in a manner for which it was not intended. Jumping from the top, elevated rungs could be dangerous.
- \* Observe capacity limitations of your play-frame - 1 user maximum.
- \* Recommended age: 0 months – 5 years
- \* Not suitable for children under 36 months until fully assembled – fall hazard and small parts – choking hazard. WARNING – periodically check thumb screws to make sure they are securely in place




**WARNING: ADULT ASSEMBLY IS REQUIRED**

## ASSEMBLY GUIDE

Warning: The accessory is intended to be assembled very easily. However, please read the information carefully before assembling your accessory and keep this guide for future reference. If any components are missing or damaged please contact Triclimb Ltd for a replacement before allowing your child to play.

### Contents

- A** Wheel x 1
- B** Thumb screw x 1

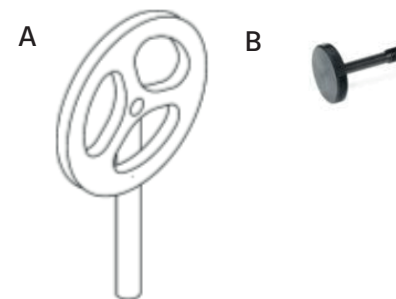

- 1** Connect the top deck as per instructions. Insert the accessory into one of the holes on the top deck. Align the hole up and screw in the screw provided to secure the accessory.

NOTE: Use of the screw is optional; it is possible to use the unit without the screw should you wish.

NOTE: The accessory can be connected to the Top Deck before or after the Top deck is connected to the Triclimb.