


Assembly instructions, maintenance and safety information

Batch no.

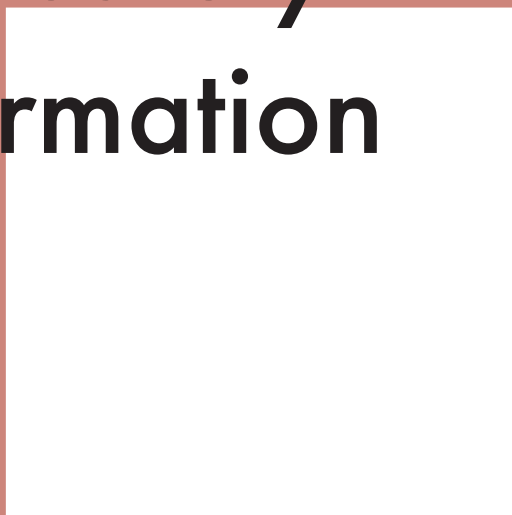

Biri


CE UK
CA

Triclimb®

Triclimb

Triclimb – BIRI Board

Suitable for ages 0+

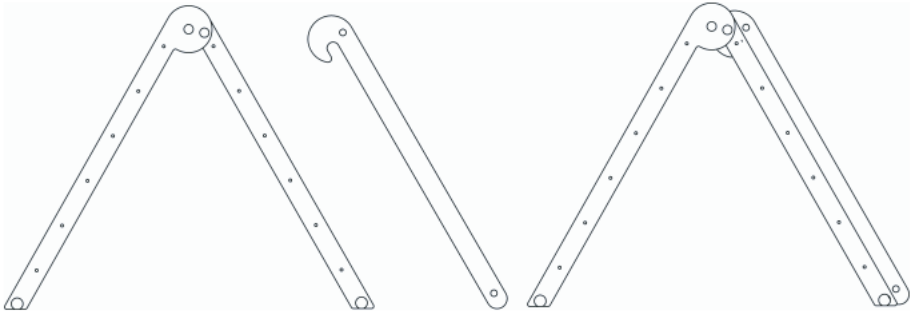

Use with or without the Triclimb – see features overleaf.



Your Triclimb accessory has been designed both for use with the Triclimb or as an independent product.

The Biri Board has two hooks that allow it to hitch securely onto the top rung of a Triclimb frame. No tools are needed to connect or disconnect the accessory.

Dimensions – 720 x 420 mm approx



WARNINGS

Connecting the accessory should be attempted by adults only. The Biri board is not designed for climbing or sliding on and should always be fully engaged prior to use.

It is extremely important that you read and retain the information in this WARNINGS section to reduce the risk of injury when using the Biri Board with the Triclimb.

*Always ensure the attachment is correctly secured in place prior to use

*Children must be supervised at all times while using the Tri Climb attachment.

*No running, pushing or fighting.

*Only use the attachment for its intended purpose. For indoor use only, in a domestic setting.

*Tip over hazard - Place play-frame on a level surface.

*Keep floors free of trip hazards and observe an obstacle free safety zone of at least 2m in all directions around the unit.

*To minimise risk of injury from falling, do not install over a hard surface; a protective surface should be used. Maximum vertical fall height - 590mm

*Never allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-frame attachment or to attach these items to the play-frame.

*Never allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this TriClimb attachment.

*Do not allow children to wear open toe or heel footwear like sandals or flip-flops whilst climbing.

*Do not permit rough play or use of equipment in a manner for which it was not intended.

*Observe capacity limitations of your play-frame - 1 user maximum.

*Recommended age: 0+ months

*Risk of entrapment connecting - Never allow children to connect or disconnect the attachment.

*Use dry erase pens only.

*Not suitable for climbing.



WARNING: ADULT ASSEMBLY IS REQUIRED

FEATURES

Biri board has been designed specifically for the Triclimb frame. With this addition your children will have a place to build and make art.

Biri board does not require any special tools to connect and comes fully assembled.

Biri board can be positioned on any of the rungs of the Triclimb to alter the angle of play.

Remove from the Triclimb frame and it doubles up for use as an independent play tray. One surface is wooden and horizontal the reverse is a Stainless steel and angled.

Our fine brushed stainless steel finish is great for non-messy play; draw, write and scribble on the board then rub it out and start again. The stainless steel surface is magnetic, and provides a dry erase surface that is also suitable for chalks due to its fine brushed finish.

Biri board is functional yet super stylish and is suitable for any room in the house. It features a compact and study design, yet is easy to store.

Biri board is a fantastic way to encourage little imaginations and boost fine motor skills while children have lots of fun at the same time.

Why stainless steel, doesn't it scratch? Stainless steel is beautiful, but it will over time begin to scratch as its surface is used, just like an stainless steel product - this is normal and nothing to worry about. We think this adds to the charm of this particular material type. It is completely recyclable, it is rust and heat -resistant. The grade we are using is magnetic, in fact more attractive to magnetics than many white boards.

CARE INSTRUCTIONS

Caring for your Triclimb is not only essential for improving safety, but will also add years to its life for your children to play on and enjoy it as they grow.

WARNING: if the checks and maintenance of the accessory are not carried out the activity toy could overturn or otherwise become a hazard.

*All bolts and fixings should be checked regularly and tightened if necessary.

*It is important to check your accessory for wear and damage regularly. If you are unsure as to the integrity of any component, replace it immediately.

*We recommend that you regularly check your accessory for splits, broken or cracked wood, missing, loose or sharp edged hardware – replace, tighten and/or sand smooth as required prior to playing.

*The wooden components are manufactured from FSC birch plywood; they are protected with a durable child/toy-safe finish.

*To clean, wipe with a damp cloth and mild detergent. Dry immediately. Leaving water or cleaning agent on the surface may damage the finish. Do not use abrasive cleansers.

* Do not modify the unit. Triclimb Ltd is not responsible for any injury arising as a result of modifications made by customers to our products without our supervision, testing, or evaluation.

IPO - Registered design.

Model – B

Designed and Manufactured by Triclimb Ltd.

Triclimb Ltd, Ty Gelert, Porthmadog, LL499NX

Triclimb NI, PO Box 620, CRAIGAVON BT64 9EL

www.triclimb.co.uk hello@triclimb.co.uk

**IMPORTANT! These instructions must be followed for use.
Please retain for future reference. 2021 V1.**

UKCA, EU, ASTM, CPSC, ISO, SOR tested and approved